


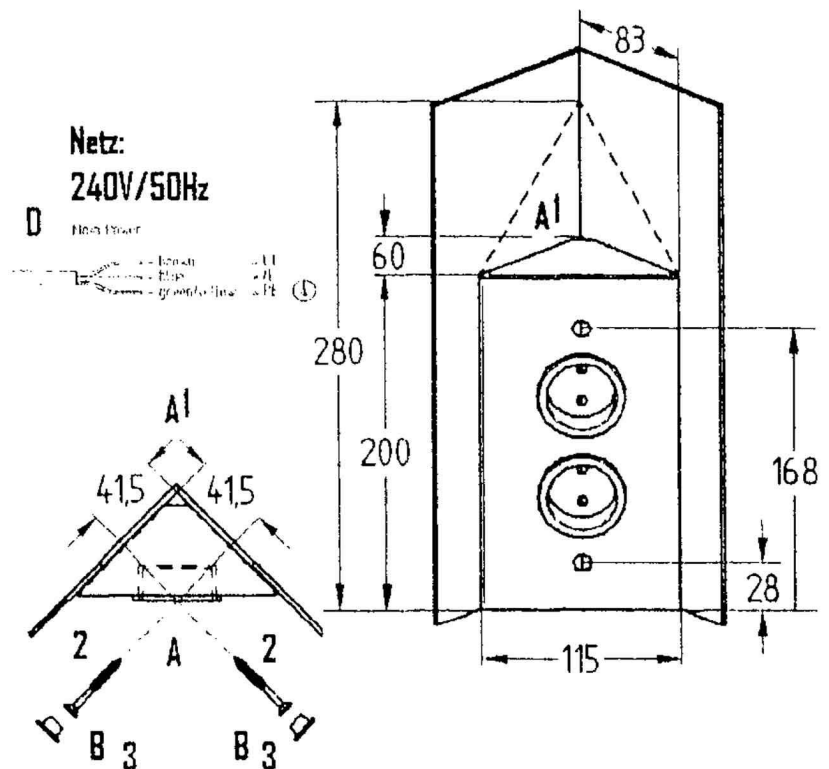

Montagefolge:

- A: Steckdosenelement in der Ecke (1) positionieren und mittels Schrauben (2) anschrauben
- B: Schraubenlöcher mittels Blindstopfen (3) verschliessen
- C: Netzanschlussleitung verlegen, bitte darauf achten dass die Leitung vor Beschädigung geschützt verlegt wird.
- D: Netzanschluss vornehmen

Achtung: Alle Montagearbeiten in spannungslosen Zustand durchführen
Bitte beachten Sie die jeweils gültigen VDE Richtlinien.
Änderungen an den Elementen oder deren Bauteile sind nicht gestattet

Mounting Steps:

- A: socket element placed in the corner (1) and mount with the screws 4,5x45 mm (2).
- B: cut holes must be closed with the cut hole cover (3)
- C: transfer the power cord to the main connection
go to be sure that the cable will not be damage.
- D: make the main connection

Attention: The applicable VDE rules must be observed, see DIN VDE 0100, or national rules.
Make sure the power supply is disconnected before carrying out any mounting work
Changes to the socket element or any cords and connections are not permitted